


Instructions for inflatable mat setup



① Make sure the package is intact before taking out the content from the package



② Take out the inflatable mat from the storage bag

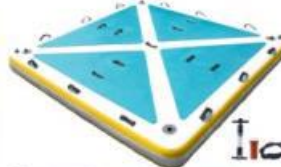

③ Spread out the mat on the ground



④ Open inflatable valve lid (counter clockwise)



⑤ Hold down the pressure valve and rotate 45° counter clockwise. The valve would be in an open state



⑥ Connecting the air pump trachea with the valve



⑦ Connect the air pump trachea with the valve and make sure the connection is secure



⑧ It is ready to pump up the inflatable mat by the air pump (make sure step ⑤ is performed)



⑨ When the inflatable mat is pumped up, stop pumping



⑩ Disconnect the pump and the valve



⑪ Press down the valve and rotated 45° clockwise to close up the air lock after disconnection with the pump. The valve should be in a close state



⑫ In order to avoid the pressure leakage, make use of the wrench to tighten up the valve in clockwise. Remember to tighten the lid after all setup