
Instruction Manual

ICE MAKER

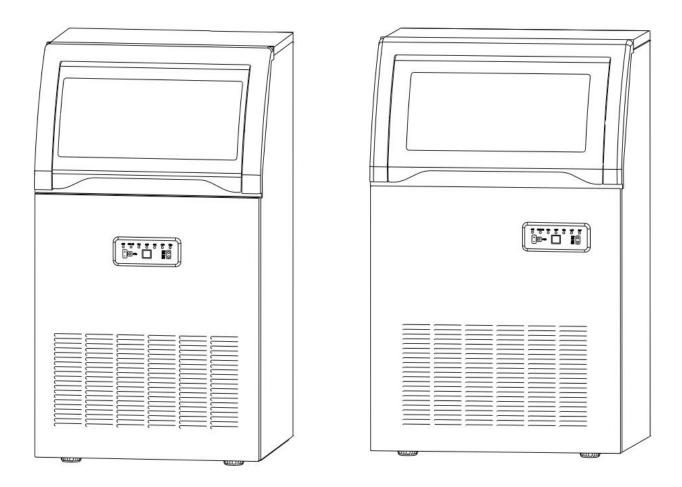

It is important that you read these instructions carefully and keep it for future reference. The picture is for reference only. Please be subject to the actual products.

IMPORTANT SAFETYINSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock and injury to persons or property. Read all instructions before operating the machine for the first time.

CAUTION: ICE CAN'T BE STORED IN THE ICE BIN DURING NIGHT TIME,IT'S NOT FRIDGE,ICE WILL BE MELTED TO WATER AND GET OUT OF THE MACHINE.

- 1. If connect with water supply, CAUTION: must connect the potable water supply;
- 2. The machine is intended to be used in household and similar applications such as:
 - -staff kitchen areas in shops, offices and other working environments;
 - -farm houses
 - -by clients in hotels, motels and other residential type environments;
 - -Catering industry and similar non-retail industry.
- 3. The machine should be used in household and without obstacles surrounded, good ventilation place. There is must be 50cm at least between the four sides of the machine with the wall.
- 4. When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock and injury to persons or property. Read all instructions before using any appliance.
- 5. Don't operate this or any other appliance with a damaged cord.
- 6. Connect to properly polarized outlets only. No other appliance should be plugged into the same outlet. Be sure that the plug is fully inserted into the socket.
- 7. Don't place the machine and power cord near flammable material.Do not cover the cord.Do not submerge it in water.
- 8. We do not recommend the use of an extension cord, as it may overheat and become a risk of fire
- 9. Unplug the ice maker before cleaning or making any repairs or servicing.
- 10. Exercise caution and supervision when appliance is used near children.
- 11.Don't use your ice maker outdoors. Avoid direct sunlight and make sure that there is at least 50cm of space between the back and sides of your unit and the wall.
- 12.Don't use any liquid other than water in the unit to make the ice.
- 13.Do not clean your ice maker with flammable detergents. The fumes can create a fire hazard or explosion.
- 14.Do not tip the machine over.
- 15.If the ice maker is brought indoors from outdoors during the wintertime, give it a few hours to warm up to room temperature before plugging to power source.
- 16.This unit should be properly grounded for your safety. The power cord is equipped with a three-prong plug which mated with standard three prong wall outlets to minimize the possibility of electric shock.
- 17.Plug your appliance into a dedicated, properly installed and grounded wall outlet.Do not, under any circumstance power and /or grounding should be directed toward a certified electrician.
- 18. The foaming materials inside is combustible which must be kept away from fire.
- 19. It's forbidden to pull the cable to unplug the plug, pull the plug is a must.

IMPORTANCE: To avoid hazard due to instability, unit must be placed on an even and flat surface.

WARNING: The machine must be grounded and use $110V\sim/60$ Hz power supply.


- 1) Only connect to drinking water sources that meet local drinking water standards.
- 2) In addition to the method recommended by the manufacturer, no mechanical equipment or other methods should be used to accelerate the defrosting process, which will damage the system.
- 3) The refrigeration system contains high-pressure refrigerant, and the refrigeration system must not be damaged. Special care must be taken during installation and handling, installation and maintenance must be performed by a professional, and scrap must be

disposed of by designated recycling departments.

4) The ice machine has thermal insulation materials, which are flammable materials, and must be kept away from the fire source.

Quick installation diagram

Note: The picture is for reference only. Please be subject to the actual products.

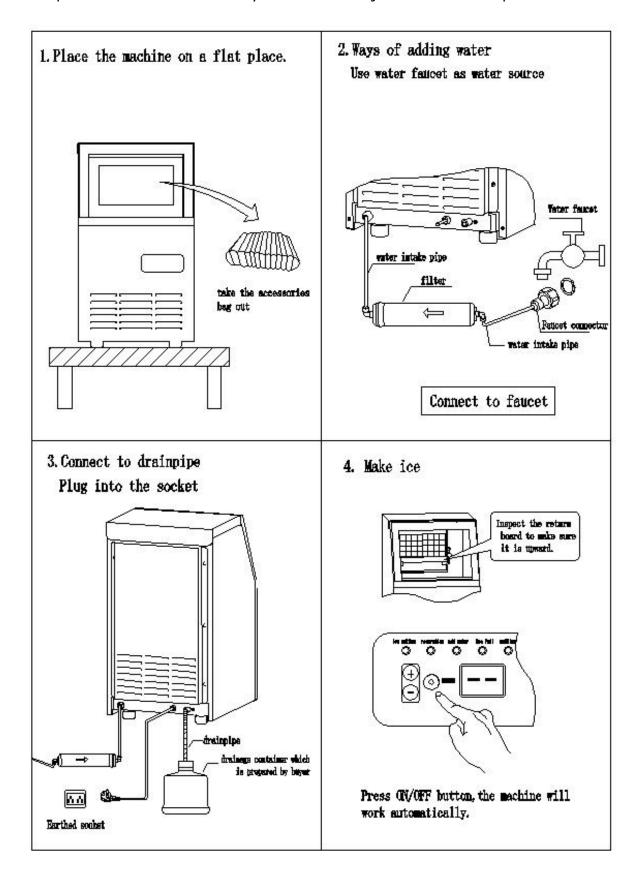

NOTE: Installation must be operated by a professional.

UNPACKING YOUR ICE MAKER

Warning: Please keep foam and other packaging materials from children and disabled people, as this may cause danger to them.

NOTE: Please remove all packages when using, or else the machine may not work properly.

- a) Remove the packaging and check whether the machine is intact.
- b) Open the accessory package and check whether the accessories are included.

Accessories list (Please be subject to the actual products)							
NO	Description	Picture	Usage				
1	Manual	96	Operation manual	1PC			
2	Filter		Filter water	1PC			
3	Drainage pipe	Ø	Drain	1PC			
4	Ice spoon	-8	Take ice cubes	1PC			
5	nylon cable ties		Fix pipe if needed	2PCS			
6	Ноор	0	fasten the outlet and the drainage pipe together if needed	1PC			
7	Seal ring	0	Do put it in the faucet of the intake pipe.	1PC			
8	Spare blue clip	oc.	Spare blue clip if needed.	2PCS			
9	Spare plug	*	Spare plug which plug the tank if needed.	1PC			
10	Таре	0	Pack the machine if needed.It's just for the machine which packed by wooden base.	1PC			

The placement of the machine

- a) Find a location for your ice maker where it's protected from direct sunlight and other sources of heat (i.e. stove, furnace, radiator). Place the ice maker on a level surface. Make sure that there is at least 5 inches of space between the back and sides of your ice maker and the wall.
- b) The ambient temperature around the machine should not be lower than 3° C, not

higher than 40°C, ensure there is at least 50cm of space between the back and sides of your unit and the wall.


- c) The machine should be placed on a stable place.
- d) Please do not put anything on top of the machine.
- e)After you unpack the machine, we recommend you to leaving it for 24 hours before turning it on.
- f)Clean the interior with lukewarm water and a soft cloth or clean the unit using the Self-Clean function.
- g)The appliance must be positioned where the plug is accessible.


2) Water connection of the machine

Warning:

- a. The ice machine can only be connected to a drinking water source, and the water source must comply with local drinking water standards.
- b.The water supply to the ice maker must be connected to a filter to improve the drinking standard of the water. Please do not directly connect to tap water.
- c. The water supply pressure should be within 0.1-0.4MPa, if the pressure is greater than 0.4MPa, a pressure reducing valve needs to be connected.
- d. The machine is drained by its own weight, so the drain pipe should have sufficient height.


3-1) Water intake

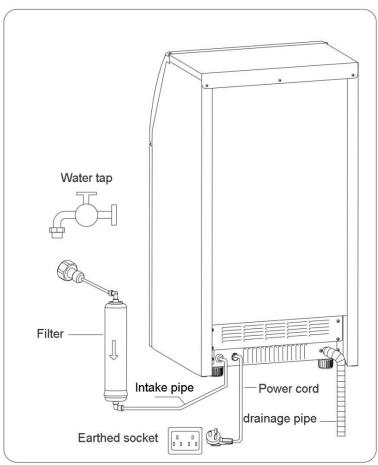

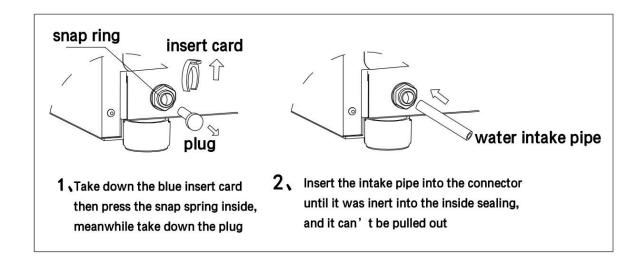

3-2) Drainage

Warning: Because the ice in the inner tank will melt, drain pipe must be connected before using, and insert the drain pipe into a container or into the sewer. Note: Connect one end of the drain pipe to the machine, and the other end to a container or sewer. The other port of the drain pipe must be lower than the drain port of the machine.

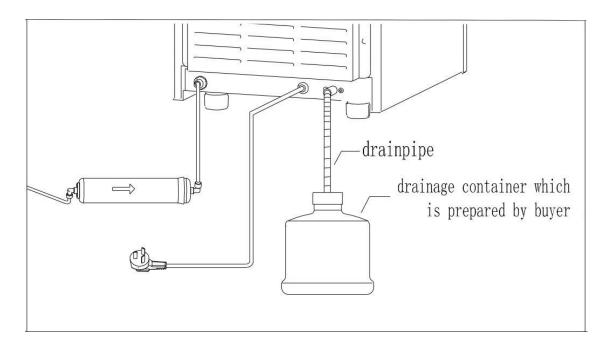


4) Electrical connection

WARNING:

- 1) The machine must be grounded and use 110V ~ /60Hz power supply.
- 2) The fusing current of the electrical box must be >10A,If it is to be replaced,must be operated by a technician.
- 3) voltage fluctuation can't be exceed $\pm 10\%$ than rated voltage,or a Voltage stabilizer is needed.
- 4) The blue light installed inside the machine must be replaced by a professional.

MACHINE OPERATIONS

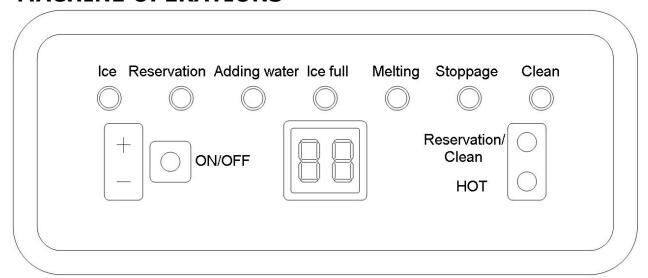

Operation Panel

Ice making operation:

- Connect the machine to the power and press the "ON/OFF" button. The "ice making" indicator will light on.
- 2. Press the "+"/"-" button to set the countdown time for the ice making procedure (The time range is from 5 minutes to 50 minutes). The machine will enter the ice making procedure.
- 3. When the countdown of time is finished, the **"melting"** indicator will light on. The ice cubes will come off the evaporator.
- 4. After the ice cubes come off. The machine will enter another loop of ice making automatically.

Auto Turning On/Off:

- 1. When the machine is turned off while connected to the power, press the "Reservation/Clean" button and the "+"/"-" button to set the auto-turning-on time (The time range is from 0-23 hour,in hours). The machine will automatically turns on after the countdown is finished.
- 2. When the machine is at the middle of ice making, press the "Reservation/Clean" button and the "+"/"-" button to set the auto-turning-off time (The time range is from 0-23 hour,in hours). The machine will automatically turns off after the countdown is finished.

Self-cleaning:

1. When the machine is turned off while connected to the power, press the "Reservation/Clean" button and hold it for a while. The machine will automatically enter self-clean program.

Notes:

- (1) If you change the countdown time during the middle of the ice making procedure, it will take effect at the next loop. You can long press the "HOT" button during the ice making to unload the ice cubes ahead of time.
- (2) The surrounding environmental temperature will influence the time needed for ice making.

Warning:

- 1.To keep the ice cubes clean, wash your hands and use the scoop to take the ice cubes.
- 2. Don't store any others except ice in the tank.

The use of any electrical appliances must follow basic guidelines, especially:

High humidity environment will increase the risk of short circuit or electric shock. If in doubt, please cut off the power of the machine.

It's forbidden to stop the machine by pull down the plug directly.

When there is no adult supervision, the ice maker cannot be used by children or the elderly people.

CLEANING & MAINTENANCE

Please thoroughly clean your ice maker before initial use.

EXTERIOR: the outside of the ice maker should be cleaned regularly with a mild detergent and warm water. Always use a soft cloth to avoid scratching or damaging the housing.

SPOON: clean with mild detergent and warm water in week.

Storage tank: clean with mild detergent and warm water in week.

PUMP: clean with mild detergent and warm water in week. Turn off and unplug the machine, take the pump out, clean it with a brush then install it back.


INTERIOR: please use the following Self-Clean function:

- 1. Add water and vinegar or lemon juice mix (1:1 ratio)
- 2. Plug in unit, press and hold the CLEAN button for approximately 6-7 seconds, then release. The unit will automatically enter Self-clean program. This process takes about 5-6 minutes. When the Self-Clean program is finished, unit will automatically power off.
- 3. The fan blade will be rotating. This process rinses the inside parts several times.
- 4. After the Self-Clean program is completed, unplug the power cord and drain out the water by unplugging the drain cap on the side. Replace drain cap.
- 5. Add fresh water to the water reservoir, up to the water level mark.


- 6. Plug the unit and repeat the Self-Clean process by repeating steps 3 to 5. This will rinse out the vinegar/lemon residue.
- 7. After draining the water, replace and tighten drain cap.
- 8. Dry the interior and exterior with a clean, soft cloth.

NOTE: It is strongly recommended to clean the unit before initial use or after the unit has not been in use for a long period of time.

Circuit Diagram

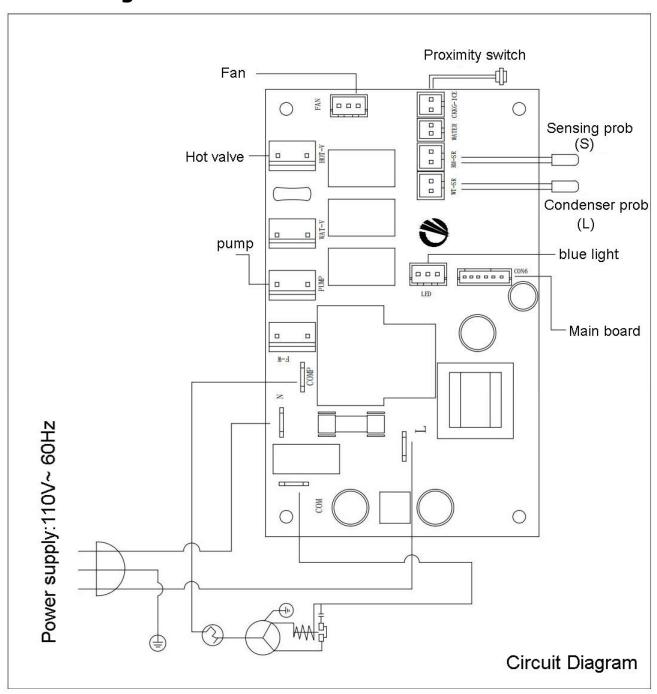

NOTE

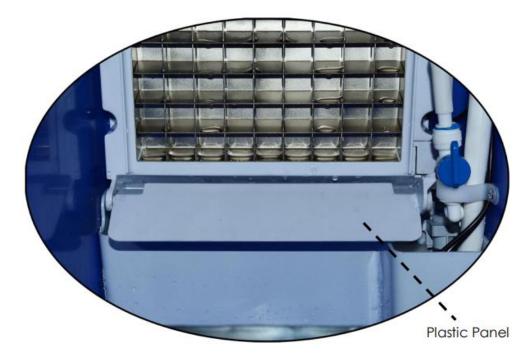

As the production of ice cubes increases, the plastic panel inside the machine (shown above) might be pressed down by the ice cubes. When the plastic panel is pressed down, the machine will stop producing ice cubes automatically and the "stoppage" indicator will light on. Please clean out the ice cubes regularly for continuation of ice making.

Common malfunction analysis

1) NO ICE

Issues	Check items	Possible causes	solutions	
The machine	Power cord	The plug didn't plug into socket	Plug into socket	
doesn't work	The fuse of PCB	The fuse is melted or broken	Replace the fuse	
	Ice bin	The ice is full	Clean out the ice cubes	
	Power supply	No power or lower voltage	Contact power supply bureau	
	Water supply	No water or water pressure is low	Check water source and its pressure	
	Proximity switch	Proximity switch is broken	Replace the proximity switch	
	Power supply	Lower voltage	Contact power supply bureau	
Compress or didn't work or	Air inlet	Air inlet is congested	Ensure that the machine's surrounding space of at least 15 cm o clear of any objects	
stop working	Condenser	Too much dust covered	Clean the condenser	

suddenly	Refrigerant	Refrigerant leaked	Contact after sales service	
	compressor	Connection wire is broken off Contact after sales service		
	Water inlet	Water inlet is loosened	Re-tightened the water pipe	
Water leakage	Inlet or outlet pipe	It's broken	Replace a pipe	

2) Lower making capacity

Issues	Check items	Possible causes	solutions
	Water pressure	Lower water pressure	Check the water source
Take too long to make	Water temperature	Water temperature is high	Change to a water source of lower temperature
ice	Ambient temperature	Ambient temperature is too high or too low	Change to a place of lower temperature
	Refrigerant	Refrigerant leakage	Contact the after sales
Productions	Condenser	Too much dust covered causes bad ventilation, will take too long to make ice	Clean the condenser
of ice cubes	Water pump	Water pump broken	Replace a water pump
is low and the cube ice	Ambient temperature	Ambient temperature is relative high	Change to a place of lower temperature
is too thin	Air inlet	Air inlet is congested	Ensure that the machine's surrounding space of at least 15 cm is clear of any objects