

### **Registering a Fingerprint**

1. Press and release the initialization button on the back of the circuit board
2. Immediately place finger on scanner, you will hear two beeps and one long beep.  
Remove fingerprint from scanner
3. Registration of fingerprint is now complete
4. To add a fingerprint repeat steps 1 through 3

### **Note**

Three short beeps will be heard if fingerprint was NOT registered successfully  
Repeat steps 1-3

### **For Accurate and Consistent Fingerprint Scanning**

- Use scanner in low light conditions
- Use the thumb finger - Place and hold finger firmly on the scanner
- Each user should register 2-3 different fingerprints, 32 is the most.

### **Opening the Door with Fingerprint**

1. Press the confirmation key until the scanner illuminates green
  2. Place finger on scanner until green illumination ceases
  3. The green indicator light will flash and you will hear one beep, indicating a successful scan
- Three short beeps indicate an unsuccessful fingerprint scan, repeat steps 1-3

### **To Delete All Fingerprints**

1. Press and hold down the initialization key
  2. The finger scanner flashes green twelve times and a beep is heard to indicate all fingerprints is deleted
- If all fingerprints is deleted, then you can open it with any fingerprints

### **Low Battery Indicator**

If the red indicator light is flashing or is consistently on, this indicates that the batteries are low.