Intelligent can sealing machine. an instruction manual

Instructions for safe use

Functional introduction

Basic parameters

Matters needing attention

After-sales service and process

Warranty card

First of all, thank you very much for using the intelligent can sealing machine.

For the safety of you and others, please read it carefully and use it on the basis of full understanding.

We provide a lot of important safety information on this instruction manual and the machine you purchased. All the safety information will tell you how to use the machine correctly, what is the potential danger, how to avoid injury, and remind you what may happen if you do not follow the instructions.

Instructions for safe use

- 1. Please use it under the following conditions
 - ① Placement requirements: use on the table which can withstand the pressure of 70 kg and ensure the stability of the table.
 - ② Applicable environment: please place where it is not easy for young children and non-related personnel to touch and operate.
 - 3 Voltage requirements: 220V ±10%, 110V ±10%
 - 4 Ambient humidity: 10%, 60% (no dew)
 - ⑤ Ambient temperature:-10 °C-50 °C
- 2. It is forbidden to modify the line privately, which may cause fire, electric shock or machine failure, and make sure that the ground wire is well

connected.

- 3. It is forbidden to open the back cover of the machine at will. There is a danger of electric shock.
- 4. Do not directly touch the sealing roller and pressure head of the machine, there is a risk of crushing injury.
- 5. It is forbidden to install outside, avoid direct sunlight, strictly prohibit moisture, and maintain the ambient temperature of 0 °C-50 °C.
- 6. When not in use for a long time, please clean up the residue in the rising rod and oil it to avoid rust.

 When you use it again, please idle several times to get the parts back to normal operation.

 Please keep it at hand after reading and use it in

accordance with the requirements of this manual.

Our company is not responsible for any injury caused by non-compliance with the instructions.

If you have any problems, please entrust the professionals of the service center authorized by our company.

Any sealing machine has a certain service life, in order to avoid injury or damage, please regularly check whether the base riser has residue leading to rust or circuit aging, sealing wheel wear.

Replace the new machine at the end of life or when necessary.

Functional introduction

1, name of each part

The first generation of manual rotation appearance view: as shown in figure (1)



The first generation of automatic rotation appearance view: as shown in figure (2)




(Figure 2)

The second generation of non-rotating appearance view: as shown in figure (3)



The name and function of the operator panel: as shown in figure (4)

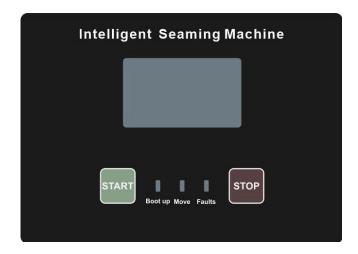

(Figure 4)

Boot up: When the light is on, it is turned on.

Move : Flashing lights indicate that machines are operating

Faults: Flashing lights indicate machine failures or

current emergency stops

[Start] key: start, pause

[emergency stop] key: emergency stop

2. Main functions

This machine is suitable for sealing cans, machine counting functions, fault prompt function, when machine encountered emergency situation can be emergency stop function.

Basic parameters

Model type	Voltage	Power	Net weight	Dimensions
Manual	220V	370W	35kg	360*202*636mm
rotation				
Automatic	220V	370W	35kg	360*202*636mm
rotation				
Automatic non rotation -202	220V	370W	48kg	438*235*634mm
Automatic non rotation -502	220V	370W	51.5kg	475*306*636mm

Initial use

- 1, plug in power cord to open power switch, wait 5 seconds machine display normal interface appears standby display lamp long bright when usable,
- 2. put the bottle packed into tray, then press start button, will seal, sealing when running lights lit, sealing off motor stop after product.
- 3. when problems occur when failure lights flashing, turn off power switches and restart.

Matters needing attention

1, prohibit hand directly touching machine movement part during cup process until machine stop operation can carry on next operation.

- 2, check whether the cup type matches when the tray is installed and replaced for the first time.
- 3, when the cup is pushed to the highest point, pay attention to whether the base is loose.

After-sales service and process

1, service process

- ① In order to avoid unnecessary door-to-door maintenance, please first check the failure with this manual, some phenomena are caused by improper operation, some phenomena can be eliminated by users, and some phenomena can be recovered by themselves after restarting the machine.
- ② If it is a fault that can not be eliminated after self-inspection, please inform our local service unit in

time to guide door-to-door maintenance.

3 Door-to-door maintenance requires users to produce purchase invoices and provide free maintenance services during the warranty period. if they are unable to provide invoices or outside the warranty period, maintenance services will be provided in the form of a fee.

After providing the service, ask the customer to fill in the maintenance acceptance confirmation form and statement, which will facilitate our company to establish maintenance files for you and better provide you with follow-up service and return visit.

2. Warranty regulations

1) This machine implements the national regulations

of three guarantees.

- ② The sealing assembly of the whole machine is guaranteed for half a year.
- There is no warranty for fragile and easy-to-lose parts.
- 4 Motor and computer board warranty for one year

The above warranty does not include man-made, accident, self-disassembly of the machine, failure to use the original parts of the company, and damage caused by the failure to use the machine as required. The company shall not bear any liability arising therefrom.

Warranty card

User name	
Full address	
Phone number	
Postal Code	
Product model	
Date of purchase	
Place of purchase	
Purchase price	
Invoice number	
Warranty date	
Repair unit	

Notes for users:

- © Users from the date of purchase, if there is a failure during the warranty period, please go to the designated maintenance point with the warranty card and purchase ticket to go through the free warranty formalities (the man-made reason is not within the scope of the warranty).
- ©If the machine is dismantled without authorization, it will not be repaired.
- ©The warranty system shall be implemented in accordance with the relevant provisions of the state.
- $\ensuremath{\mathbb{O}}$ Users need to properly guarantee this card, lost and unfilled, altered invalid, expired and invalidated.