


Pipe Inspection System

Instruction Manual

www.vevor.com Contact:service@vevor.com

Call us: (+626) 275-4507 (For USA) (+44) 1173182739 (For Europe) (+001) 626 275-4507 (For Other Countries)


Working Time: Mon-Fri 8:00 am to 5:00 pm

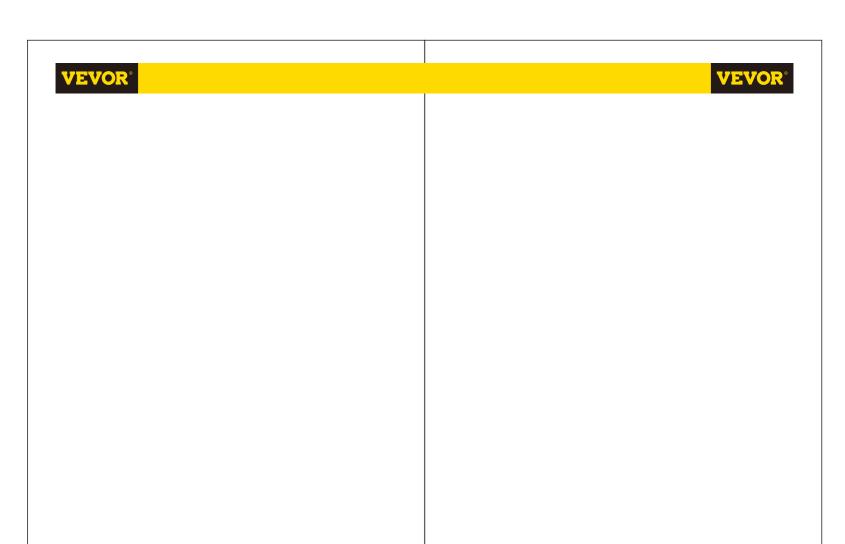


Vital: turn off the power switch, connect the video camera and the monitor, or the video camera and the monitor may be damaged. Connect camera 4-coil 3-cell box 2-monitor 1 (Pic.1) Turn on the power switch in the power box, the indicator light on the monitor is on, the switchboard starts. Install the video camera with the protective cover slightly and put it into the pipe, rotate coil to proper death Install the video camera with the protective cover slightly and put it into the pipe, rotate coil to proper depth. Adjust LED light degree adjuster to proper light degree. For videotape, refer to the DVR operation details (display operation:Recording Type) Switch video to another large screen through video line. After utilization, mover the camera from the pipe carefully, take clean, soft and dry cloth to clear up it and put it back. Picture 1

System Installation

VEVOR°

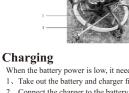

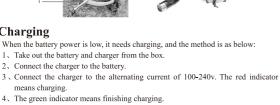

Notes: to make sure the battery using age longer, please recharge it timely; otherwise,



it will make it can not recharged.



parameter

AC100-240V DC12.6V 1000MA

Lithium battery 12V4500MA

Approximate 6h 20M(selectable line length)

Fiber tube with /high intensity

1.Please read the manual carefully before using it.

Attentions

- 2. Handle it carefully during operation, avoid throwing down or pressing it
- 3.If the users disassemble or deliberately damage the machine, it will beyond the warranty.

VEVOR®

- 4.please keep distance from the system when charging
- 5. After being used, turn off the display and pull out all the connection
- $6. \\ Due to the version upgrades, \ if mentioned in this manual content does$
- not accord with your machine, please refer to our machine.

1.Color TFT LCD Screen.

Description

2. High resolution camera, clear picture,

3. Night vision. ${\it 4. High\ quality\ special\ cable,\ waterproof\ and\ anti-corrosion/cold/tensile.}$

cell box(D)

1. power light

auto mode.

2 key

5.12V4500MA lithium battery. 6. With sun-visor for bright environment outside

7.Range of Application: Water-supply pipe. Air-conditioner pipe. Cable pipe、Pipeline vacuum system、PLUNBIN pipe、Buildings、Sunken pipe

VEVOR

Item:


8

Charger: Battery: Continuous use time for battery:

Investigation depth: Material: Camera light source: Camera material: Menu languages Camera picture: **Instruction for Product**

Product Specification

With high while light Stainless steel Multi-language Color 1 Camera (A) 1, metal contact chip 2 spring 4. camera lens

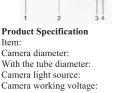

Lights working voltage: 12V Water proof: Camera material: Camera size: Camera protective cover parts material: Camera protective cover parts size 1: Camera protective cover parts size 2:


3 highlight white LED parameter 23MM

> IP68 stainless steel 120MM* 23MM plastic-steel 29MM* 40MM 40MM* 90MM

12 LED with high while light(adjustable)

3 power switch 4 charging connecting base

6, power of monitor 7, monitor video

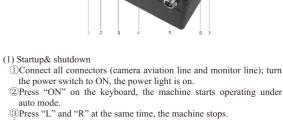

(a) Turn the power switch to "OFF", and disconnect the connectors.(b) Turn on the night-vision light.(c) Press "LED" on the keyboard to control the switch of night-vision

of the camera. The light is on when starting up. (3) Rotate manually and automatically ①Press "AUTO/MANU" to switch manual and auto rotation. It will be auto when starting up, the camera will rotates right under auto status.

②Turn left. Press L under manual status, the camera turns left, press L again the camera stop. ③Turn right. Press R under manual status, the camera turns right, press R again the camera stop ④Rotate to specified angle. Press R under auto status to choose angle A, then press R to choose angle B, the camera rotates between A and

(4) Rotation speed control ①Press SPEED under auto status and start high-speed rotation. Press SPEED again to go back to normal speed.

B. Press R again to cancel the rotation and turn to auto status.

7

2

5, battery indicator 6, power input for charger 7, light-degree adjustment for white light LED

cell box (E)

3 cell box(A\B\C)

1, monitor video 2, power of monitor 3, adjacent coil plug 4, AV output

8, power switch 9, power light

6, battery indicator





1, transparent case 2, lens 3, highlight night-vision 4, metal contact chip

Product Specification

Camera size:

Camera(C)

Product Specification


With the tube diameter:

Camera visual distance: Camera light source: Camera working voltage: Lights working voltage: Water proof: Camera material: Camera size:

Camera (B)

Camera diameter: With the tube diameter: Camera light source: Camera working voltage: 18-100MM 6 LED with high while light(adjustable) 5V 12V

1, metal contact chip 2, spring 3, highlight white LED 4, camera lens

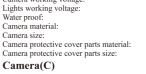

IP68 stainless steel 100MM* 17MM 20MM* 25MM 1、highlight white LED 2, camera lens

> 6.5MM 7**-**30MM stainless steel 45MM* 6.5MM

10-80MM (approximate) 6 LED with high while light(adjustable) 3.3V 3.3V

Camera protective cover parts material: metal 45MM* 15MM Camera protective cover parts size:

3

6

Product SpecificationItem:

Item:
Camera diameter:
With the tube diameter:
Camera light source:
Camera working voltage:
Lights working voltage:
Uights working voltage:
Water proof:
Camera size:
Camera protective cover parts size:

Camera(E)

Product Specification

 (\odot)

parameter 145MM

>150MM

IP68

LED with high while light 12V 12V

160MM* 94MM 170MM* 145MM

parameter 42MM >45MM LED with high while light 12V IP68 136MM* 42MM *11MM 99MM 54MM* 140MM

Cable length scale

2 Coil





the scaled cable can show the cable length



Item:
Camera diameter:
With the tube diameter:
Camera light source:
Camera working voltage:
Lights working voltage:
Water proof:
Camera size:

Camera protective cover parts size 1: Camera protective cover parts size 1:

Camera size: