 


# **Tennis Ball Machine**

## **TS-08 Manual**

### **TS-06**

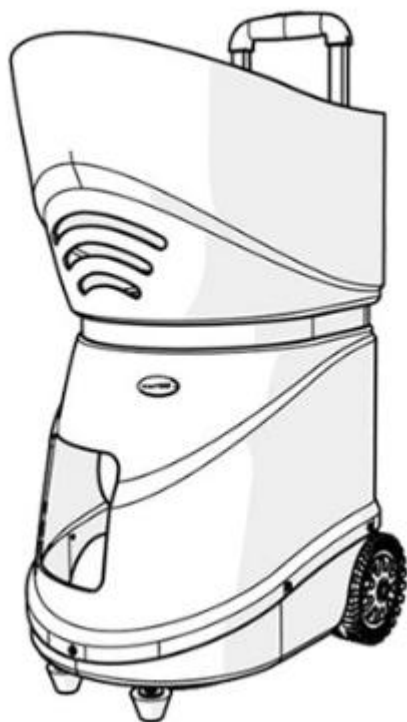

**Thank you for choosing TS-08 (TS-06) Tennis ball machine.**

The Quick Start Guide includes an introduction to the TS-08 (TS-06) Technology Edition. Before operating the machine, please read this manual carefully to avoid unnecessary damage to the body and damage to the machine.

### **CAUTION:**

This machine was designed to be used on a tennis court and in no other circumstances. Only tennis balls must be used, no other balls should be ejected from the machine. Never stand in front of the machine unless you are on the other side of the net (more than 7 meters (8 yards) away). Even when the machine is paused, never stand in front of it as balls can eject at any time. Children should be supervised at all times and taught never to stand in front of the machine.

Do not use the machine in rain and avoid using wet balls. We recommend the use of pressure less balls to give your machine the best performance. Using a combination of new and old balls will give inconsistent results.

Step 1: Install the software

1. Android OS

Download and install the mobile APP software

Download link:

**[Http://www.tennismash.com.cn/ts0608.apk](http://www.tennismash.com.cn/ts0608.apk)**

2. IOS

Search for “**tennismash remote**” in app store to install

 
APP software

Step 2: turn on the switch


Step 3: Mobile phone and machine Bluetooth match, set up and run software.

From the mobile phone settings into the Bluetooth settings, scan for devices (TenniSmash08 or TenniSmash06)


Input PIN Code: 1234 (iPhone users skip this step.)

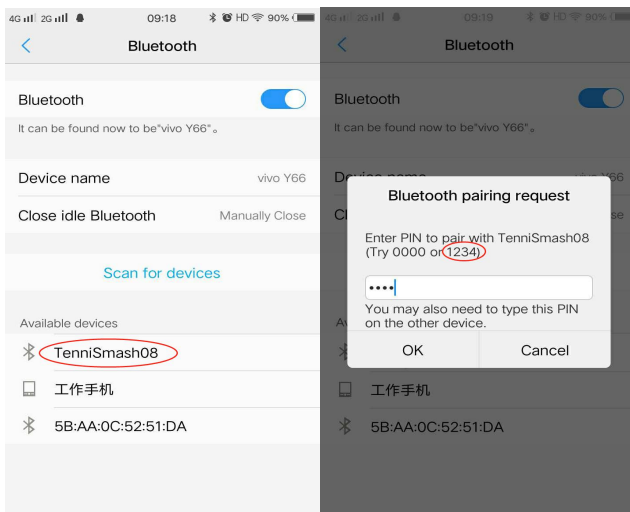

Paired Connection Successful

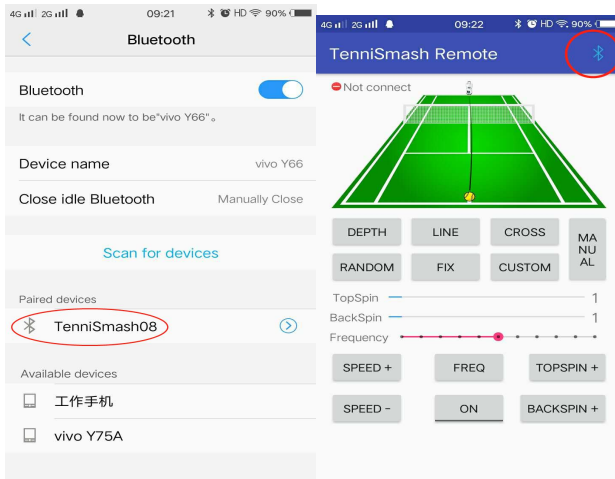 

 Run the App, click on Bluetooth icon, and select the machine that have been paired.  
Then select the machine ( TenniSmash08 or TenniSmash06 )

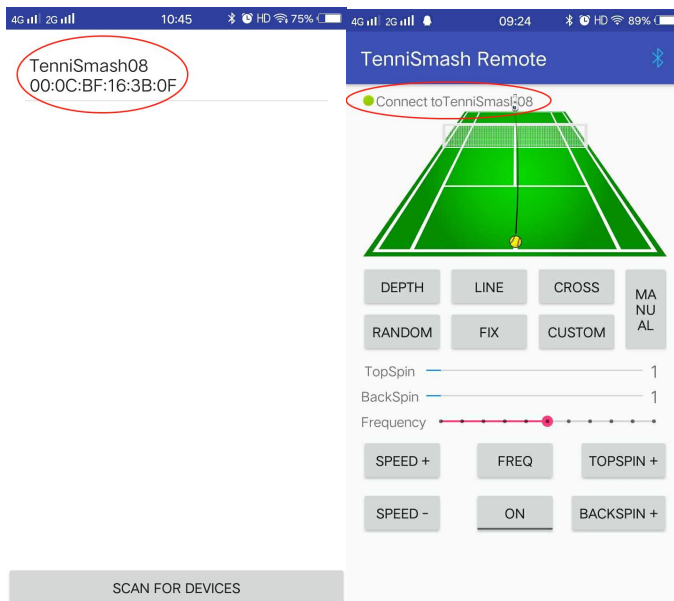

When the connect to TenniSmash08 (TenniSmash06) is displayed on the upper left corner, the connection is successful.

Click "ON" to run the machine

\* If the mobile phone can't find the machine through Bluetooth or there is a problem with Bluetooth pairing, you can try restarting the mobile phone and the machine.

## Operation panel diagram



## Charging batteries:

This product is equipped with 16AH large capacity lithium battery, the battery is fully charged after the normal working time is about 6 hours. Please charge before use. While charging , the charger indicator is displayed in red, fully charged into green. When the battery is exhausted, the charging time is about 8 hours.



## Steps:

1. Place the ball machine to the right place on tennis court; fasten the ball-loading frame back on the serve machine.
2. Adjust the direction of the ball.
3. Adjust the ball speed and mode.

#### 4. Enjoy the Tennis

#### **Maintenance:**

You can vacuum out the inside of your machine to remove ball fluff. The outside of the machine can be wiped down with a mild detergent, however, please be careful not to get water inside the machine. The throwing wheels should be wiped down after every use to prevent any buildup of residue from the balls.

#### **Troubleshooting:**

1. When the power button is pressed and the power is off, follow the steps below:

A) Check that the battery is charging.

B) Check if the fuse is blown.

2. Press the power button, the power light does not light, may be due to excessive current, battery start protection. If the battery protection lock occurs, the switch indicator light does not light. Please turn off your machine, the battery charge for 5 minutes can unlock the battery.

#### 3. Clearing Ball Jams

If you find that a ball gets stuck behind the two throwing wheels, the machine may shut down to prevent damage to the circuit board. Please turn the machine off and clear the ball jam.

4. Does the battery of the new machine have electricity?  
Generally, the stored power of the new battery is less than 30% when it leaves the factory. When you get the machine, the battery is almost dead. If you need to try the machine or play ball, you should charge the battery first to avoid inconvenience caused by no power. After the battery is fully charged, the normal working time is about 6 hours. If all the power is used up, the charging time is about 8 hours.

5. Press the switch but the machine does not work  
First, check whether the fuse tube is burnt out. If the fuse tube is burnt out, you need to take out our spare fuse tube at the side of the battery pack and replace it; If the fuse tube is in good condition, we need to check whether the battery is charged. The charger indicator light is green when standby, red when charging and green when full.

Note: check whether our charger and socket are successfully connected. If the socket is loose, the charger will display green, creating the illusion that charging has been completed.





6. Burn the fuse when the machine is started

First check whether there is a ball stuck in the machine;  
Then you can adjust the speed to the minimum and restart.

7. The ball missed the net

Set the ball speed above 6 and place the machine at the midpoint of the baseline.

8. Can children's balls be used?

You can use two kinds of children's balls: orange ball and green ball. The red ball can't be used because it's too big.

### 9.How to deal with ball jamming?

Turn off the power immediately to prevent the fuse from burning out; Then check where the ball is stuck and empty the ball in the machine in time. If the ball is stuck between the two wheels and it is difficult to take it out directly, we can use our hands, pens, sticks and other things to move the ball to the chassis and then take it out. During the use of the serve machine, avoid using wet ball or airless ball to avoid ball jamming.



10. In the manual mode of ts08 and TS06, the mobile phone screen is not displayed when it is adjusted up, down, left and right

The software interface is not displayed. You can observe the change of the position of the serving wheel. The adjustment is set circularly: adjust the serving wheel up

and down to reach the highest point, then down, reach the lowest point, and then up. The left and right adjustment is also that the serving wheel reaches the left and then right, and the wheel reaches the right and then left.

#### 11. Other fault conditions:

If you can not personally troubleshoot, or if any of the above problems occur, please call our customer service hotline for further processing.

#### 12.Differences between TS-06 and TS-08

TS-06 can adjust any landing point of the tennis court through mobile app, and has left-right swing and vertical swing functions.

TS-08 is remotely controlled by mobile app. It has 6 fixed landing points and 28 kinds of ball delivery lines. It can compile and set a combined ball line with multiple landing points, and can define up to 20 landing points for circular ball delivery. It can be switched to TS06 mode (manual mode) to cover all functions of TS06.

## Product Details:

<b>Model No.</b>	<b>TS-08 TS-06</b>
<b>Rated Voltage(V)</b>	<b>DC12</b>
<b>Ball Capacity(Pcs)</b>	<b>160</b>
<b>Speed (Km/h)</b>	<b>20-140</b>
<b>Feed rate (second)</b>	<b>2-10</b>
<b>Battery Life (Hour)</b>	<b>4-8</b>
<b>Gross Weight (Kg)</b>	<b>19</b>
<b>Dimension(mm)</b>	<b>578×448×528</b>

## Packing List

<b>Tennis Ball Machine</b>	<b>1pcs</b>
<b>Charger</b>	<b>1pcs</b>
<b>User Manual</b>	<b>1pcs</b>
<b>Fuse (back-up)</b>	<b>2pcs</b>