

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Support and E-Warranty Certificate

<https://www.vevor.com/support>


HOT DOG MACHINE SC-5XD/SC-7XD/SC-11XD USER MANUAL

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us.

You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.


MODEL NO.: SC-5XD

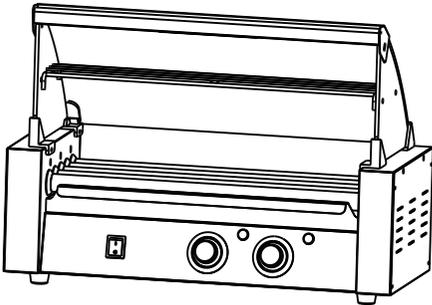

MODEL NO.: SC-7XD

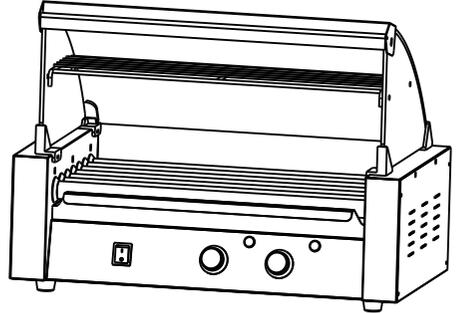

MODEL NO.: SC-11XD

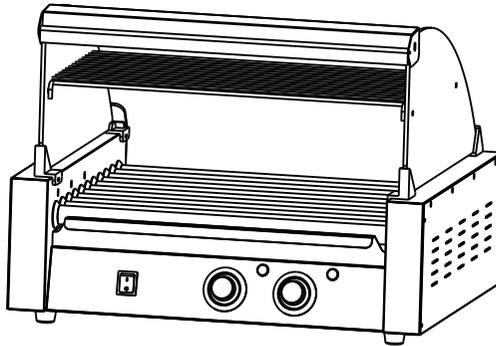

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

 CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there is any technology or software updates on our product.

IMPORTANT SAFEGUARDS

This manual will outline safety warnings and precautions, operating, maintenance and cleaning. The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that may occur. Caution and common sense are not built into this product, since we believe that the uses will comply with these codes.

Please read ALL the instructions before using your machine.

1. Make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label.
2. Do not let children and minors get close to or touch the machine.
3. Do not touch the hot surface directly with your hands. Always operate with handle or knob.
4. To prevent electrical shock, do not immerse the cord or plug into water or other liquids.
5. Do not immerse the appliance in water or any other liquid.
6. Unplug the machine from the outlet when not in use and before cleaning. Cool the appliance before installing or removing parts and before cleaning.
7. Cool down the HOT parts before operation.
8. Do not operate the device with damaged cord or plug, malfunction or with any mechanical damage. Send it to your nearest authorized service centre for examination and repair (ONLY technicians should open up the unit).
9. Using any accessories or attachments that are not provided or recommended by the manufacturer may cause injury.
10. If the machine is not to be used for a long period of time, unplug it, clean and cover it and store it in a dry and safe place.
11. Do not leave the power cord hanging over the edge of table or counter or let it come into contact with any hot surfaces.
12. Do not place the unit on or near hot air, electric burners or heaters.
13. Always switch off the power before plugging in or unplugging. Hold the plug instead of pulling on the cord.
14. Do not apply this unit to any other purposes than the indicated usage.
15. Do not use it outdoors or for commercial purposes.
16. KEEP IT OUT OF CHILDREN'S REACH.
17. DO NOT CLEAN IT WITH ANY ABRASIVE MATERIAL.
18. Never leave it unattended while in use.
19. Always check that this machine is plugged into a grounded outlet with the appropriate electrical supply. Ensure that the wall outlet being used is properly grounded. If not, you must install a grounded outlet. Have the work performed only by a certified electrician who is properly qualified to meet local safety and electrical codes.
20. Ensure that the power outlet, plug and cord being used are in good working condition. Damaged components should be repaired by a certified electrician who is qualified to meet local safety and electrical codes. Even if your power cord is functioning properly, keep it away from water and avoid letting it run over carpets or heating devices.
21. Avoid using it in the presence of flammable liquids, gases, dust or other explosive situations.
22. Extreme caution must be taken when moving an appliance containing hot oil or other hot liquids.
23. Do not operate the machine in an appliance garage or under a wall cabinet. Always unplug the unit from the electrical outlet when storing in an appliance garage. Otherwise, it would cause a risk of fire, especially if the machine touches the garage wall or the door touches it as it closes.
24. Type X attachment: If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
25. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the machine alone. Cleaning and user maintenance shall not be made by children without supervision.

Thank you for using this product. In order to make sure that you can operate the machine correctly, read this instruction carefully before operation and keep it properly for future reference. Please be sure to read the precautions and safety rules in this page to ensure your safe use.

PRODUCT PARAMETERS

MODEL NO.	Region	Voltage	Input Power	Plug Type
SC-5XD	North America	AC110-120V 60Hz	750W	American PLUG
SC-7XD	North America	AC110-120V 60Hz	1050W	American PLUG
SC-11XD	North America	AC110-120V 60Hz	1650W	American PLUG


NOTE:

1. The voltage used for this device must be the same as the power supply voltage.
2. Users need to install it near the power switch and fuse.
- 3. If the machine is not powered, remove the plug from the electrical outlet and check whether the fuse is blown.**

CIRCUIT DIAGRAM


MODEL NO.: SC-5XD

INPUT:AC110-120V 60Hz

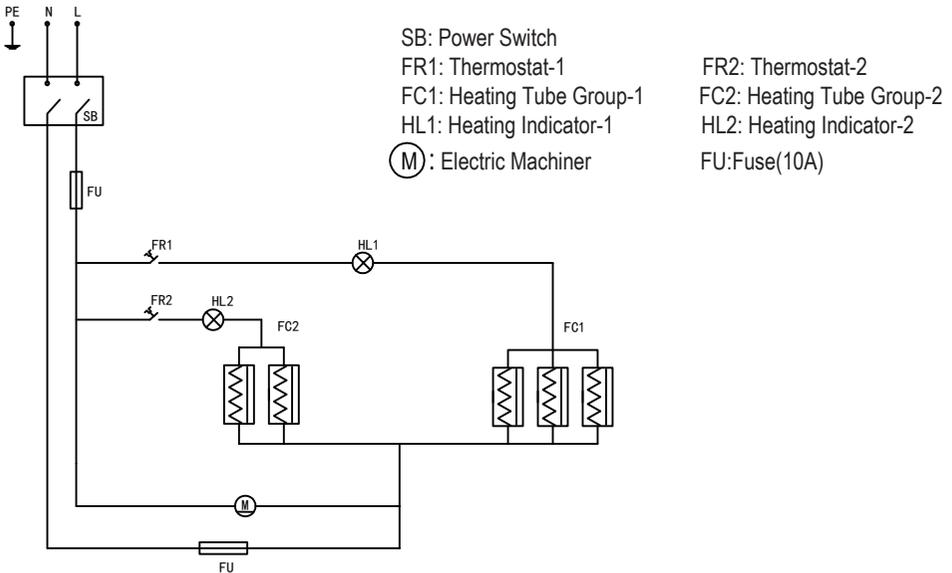


MODEL NO.: SC-7XD

INPUT:AC110-120V 60Hz

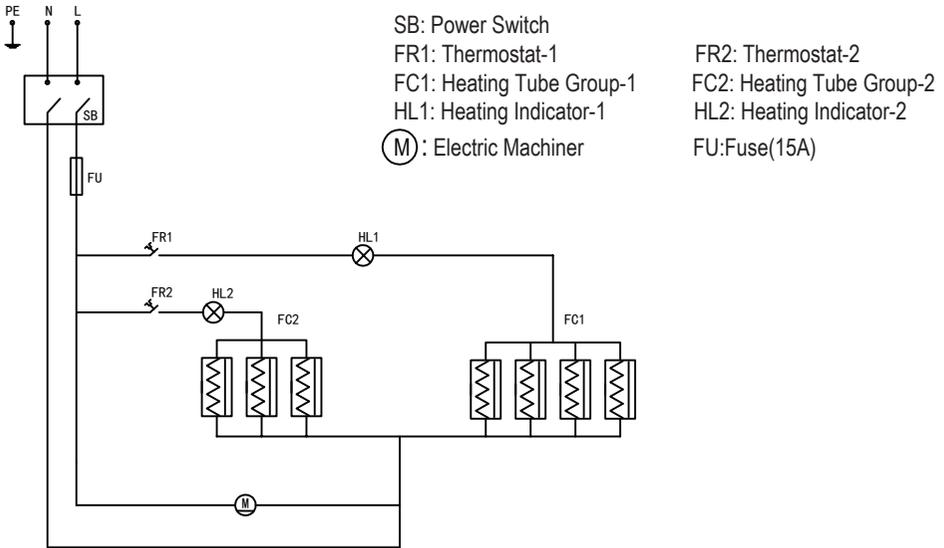


MODEL NO.: SC-11XD

INPUT:AC110-120V 60Hz

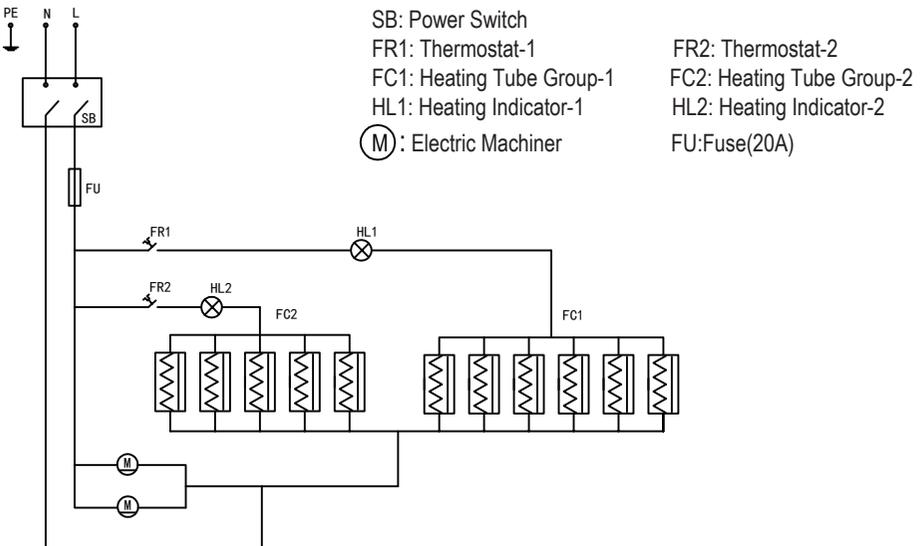


PRODUCT COMPONENTS


Note: The location of the core components of these three machines is the same!

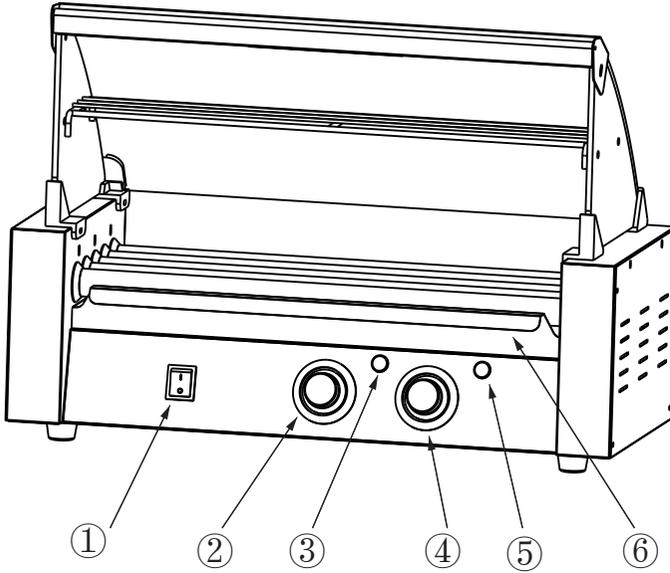

1. Power Switch
2. Temperature Knob (Front)
3. Heat Light (Front)
4. Temperature Knob (Back)
5. Heat Light (Back)
6. Pan
7. Fuse
8. Protective Earthing
9. Power Socket

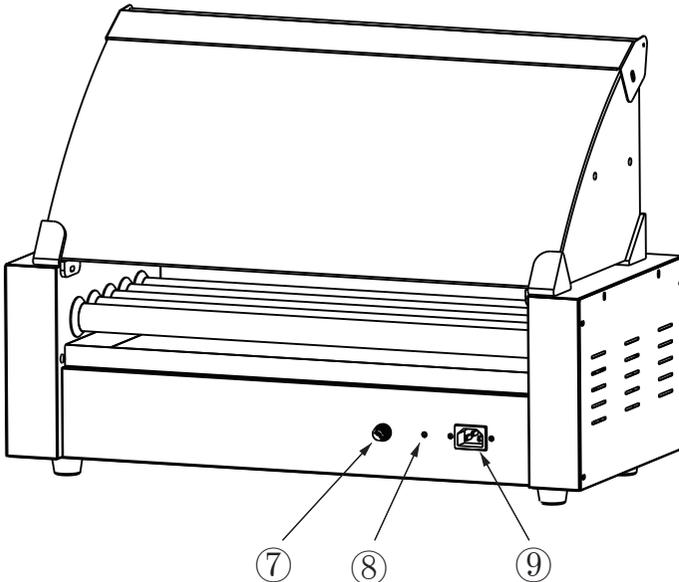

Note: The location of the core components of these three machines is the same!

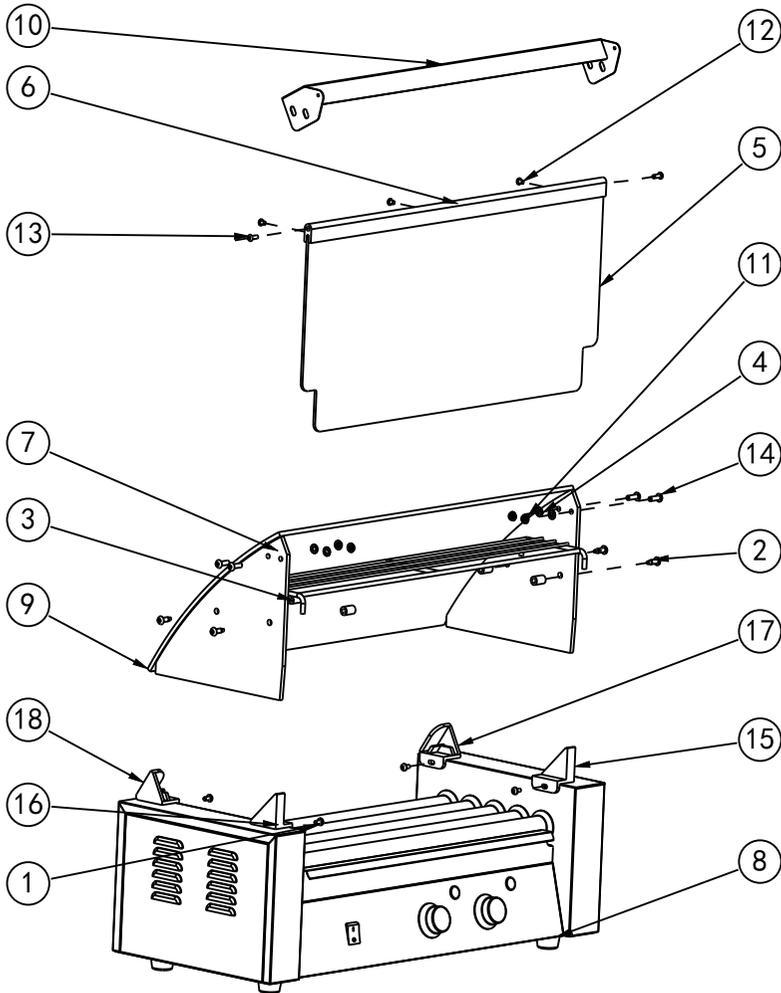

NO.	1	2	3	4	5	6	7	8	9
Name	Screw M4x8	Screw M5x16	M5 Nylon Support	M5 Silicone Ring	Glass Flap Door	Aluminum Strip	Side Glass	Base	Curved Glass
Quantity	4 PCS	4 PCS	4 PCS	4 PCS	1 PCS	1 PCS	2 PCS	1 PCS	1 PCS
NO.	10	11	12	13	14	15	16	17	18
Name	Glass fastener Front	Nut	Screw M4x6	Screw M4x12	Screw M5x16	Glass fastener Right-Front	Glass fastener Left-Front	Glass fastener Right-Rear	Glass fastener Left-Rear
Quantity	1 PCS	4 PCS	3 PCS	2 PCS	4 PCS	1 PCS	1 PCS	1 PCS	1 PCS

OPERATING INSTRUCTIONS

Before using the appliance for the first time, peel off any promotional materials and packaging materials, and check that the cooking plates are clean and free of dust. If necessary, wipe them over with a damp cloth. Spread over with an absorbent kitchen towel and wipe off any excess oil. When your appliance is heated for the first time, it may emit slight smoke or odor, which is normal for many heating appliances, and will not affect the safety of your appliance.

1. Place the machine on a clean, dry, level surface near a plug base outlet.
2. Plug the cord into the machine power socket.
3. Plug the cord into the wall outlet.
4. How to test your machine: Turn on the power switch, the indicator light is on; turn on the motor switch, the rollers rotate. Turn the thermostat knob clockwise to align the knob on the temperature scale with the red triangle on the panel, the heating indicator light is on, and the rollers start to heat. When the temperature reaches the set value, turn the knob clockwise to about 302°F (150°C). At this time, the heating indicator light will go off, which means the it has reached the set temperature.
5. Place the pre-prepared sausages parallelly in the middle of the two rollers, then the sausages will rotate in opposite directions. Please do not place the sausages too close together, leaving about 0.4 in (10 mm) at the end of each roller.

NOTE:

1. Every time you turn on the machine for the first time, you must first turn on the heating switch to preheat, and then turn on the rotary switch to prevent the motor oil from solidification.
2. Opening of the bottom pan or both sides is not permitted, in case that you are eligible to do so.
3. Usually the baking temperature should be appropriate 248°F-320°F(120-160°C).
4. When heating, your hands are not allowed to touch the steel roller to prevent scalding.
5. When connecting or unplugging the plug, it should be disconnected from the total external power supply.
6. Keep your hands dry when plugging the cord.

TIPS & HINTS

1. To save electricity and reduce the heating time, you can naturally defrost the sausages or heat it by microwave oven before.

NOTE: The pan under the rollers is used to catch drops of oil, it can also be used to preheat the sausage, but it's not appropriate to put the grilled sausages into it.

CLEANING AND MAINTENANCE

1. Once you have finished baking, remove the plug from the electrical outlet. Leave the machine to cool down completely before cleaning.
2. The rollers should be cleaned every 4-5 hours of grilling.
3. For the exterior, wipe with a soft, dry cloth. Never use an abrasive cleanser or harsh pad.
3. Any other servicing should be provided by an Authorized Service Representative.

STORAGE

1. Always unplug the machine before storage.
2. Always make sure the machine is cool and dry before string.

Made in China

Manufacturer: Guangdong Shuangchi Dining Equipment CO., LTD.
Address: No.30 Jiahua Road, Jiafu Industrial Park, Yinzhan,
QingchengDistrict, Qingyuan, Guangdong,China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Support and E-Warranty Certificate

<https://www.vevor.com/support>