

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

LINEAR GUIDE RAIL

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.


VEVOR[®]

TOUGH TOOLS, HALF PRICE

LINEAR GUIDE RAIL



SBR

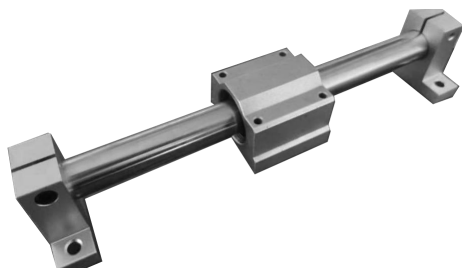

SFC

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

 CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT SAFETY INFORMATION



WARNING:

Read this material before using this product. Failure to do so can result in serious injury.

SAVE THIS MANUAL

Precautions

1. Proper installation: Linear guide rails must be installed properly to ensure accurate and smooth motion. Improper installation can cause misalignment, binding, or excessive wear.
2. Load capacity: Be sure to use a linear guide rail with a load capacity that is sufficient for the weight of the moving part. Overloading the guide rail can cause excessive wear or permanent damage.
3. Maintenance: Regular cleaning and lubrication of the guide rail and sliding block are important to maintain proper performance and extend the service life of the guide rail.
4. Alignment: Make sure that the linear guide rail is properly aligned and perpendicular to the direction of travel to reduce friction and wear.
5. Environmental conditions: Linear guide rails should be protected from extreme temperatures, moisture, dust, and other environmental conditions that can affect performance.
6. Protection from impact: Linear guide rails should be protected from impact and other sources of shock, as these can cause damage to the rail or sliding block.
7. Inspection: Regular inspection of the guide rail and sliding block is important to identify and address any problems or wear before they become serious.

Troubleshooting

1.Binding or sticking: This can be caused by misalignment, improper lubrication, or excessive wear. To resolve this issue, the guide rail and sliding block should be inspected and realigned if necessary, and lubricated with the appropriate grease.

2.Excessive wear: This can be caused by overloading, improper lubrication, or misalignment. To resolve this issue, the load on the guide rail should be reduced, and the guide rail and sliding block should be inspected, realigned if necessary, and lubricated with the appropriate grease.

3.Misalignment: This can be caused by improper installation or by wear over time. To resolve this issue, the guide rail and sliding block should be inspected and realigned if necessary.


4.Noisy operation: This can be caused by a lack of lubrication, misalignment, or excessive wear. To resolve this issue, the guide rail and sliding block should be lubricated with the appropriate grease, inspected and realigned if necessary.

5.Reduced accuracy: This can be caused by misalignment, binding, or excessive wear. To resolve this issue, the guide rail and sliding block should be inspected, realigned if necessary, lubricated with the appropriate grease, and checked for proper alignment.

PRODUCT SPECIFICATIONS

SBR LINEAR GUIDE RAIL

Rail Carriage Block(SBRxxUU)


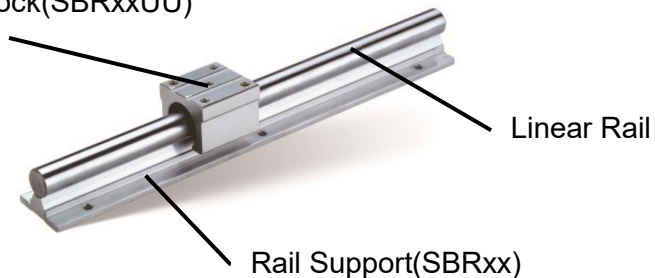


Linear Rail


- Material:GCR15 45"
- Hardness:HRC62+2(45*:HRC58)
- Surface Hard-thickness:0.8~2.5mm
- Surface roughness:0.8S~1.6S
- Straightness:80 μ m/1000mm
- Roundness: \leq 3.0 μ m(Rmax)



Rail Carriage Block(SBRxxUU)

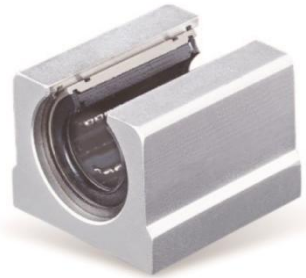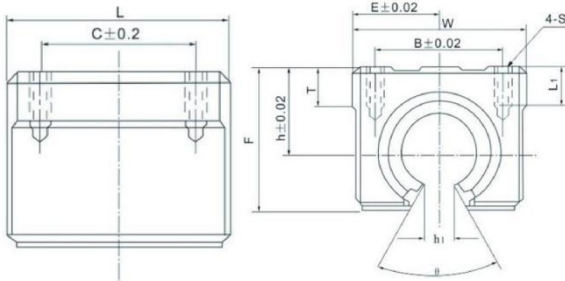

Rail Support(SBRxx)

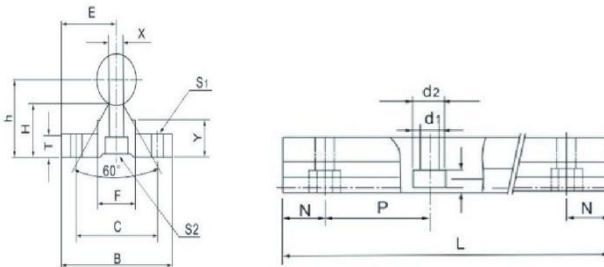

SBR12-C 1000L

Part name	Dimensions(mm)												
	h	E	W	L	F	h1	θ	B	C	S	L1	T	
SBR12UU	17	20	40	39	27.6	6	80°	28	26	M5	10	7	
Part name	Dimensions(mm)												
	Shaft Dimensions			E	h	B	H	T	F	X	Y	C	S1
SBR12	Φ12×1000L			15	22.5	32	16.5	4	12	6	12	22	Φ5

SBR16-C 800L

Part name	Dimensions(mm)												
	h	E	W	L	F	h1	θ	B	C	S	L1	T	
SBR16UU	20	22.5	45	45	33	10	80°	32	30	M5	12	9	
Part name	Dimensions(mm)												
	Shaft Dimensions			E	h	B	H	T	F	X	Y	C	S1
SBR16	Φ16×800L			20	25	40	17.8	5	18.5	8	11.7	30	Φ6

SBR16-C 1000L

Part name	Dimensions(mm)												
	h	E	W	L	F	h1	θ	B	C	S	L1	T	
SBR16UU	20	22.5	45	45	33	10	80°	32	30	M5	12	9	
Part name	Dimensions(mm)												
	Shaft Dimensions			E	h	B	H	T	F	X	Y	C	S1
SBR16	Φ16×1000L			20	25	40	17.8	5	18.5	8	11.7	30	Φ6

SBR16-C 1500L

Part name	Dimensions(mm)											
	h	E	W	L	F	h1	θ	B	C	S	L1	T
SBR16UU	20	22.5	45	45	33	10	80°	32	30	M5	12	9
Part name	Dimensions(mm)											
	Shaft Dimensions		E	h	B	H	T	F	X	Y	C	S1
SBR16	Φ16×1500L		20	25	40	17.8	5	18.5	8	11.7	30	Φ6

SBR16-C 2000L

Part name	Dimensions(mm)											
	h	E	W	L	F	h1	θ	B	C	S	L1	T
SBR16UU	20	22.5	45	45	33	10	80°	32	30	M5	12	9
Part name	Dimensions(mm)											
	Shaft Dimensions		E	h	B	H	T	F	X	Y	C	S1
SBR16	Φ16×2000L		20	25	40	17.8	5	18.5	8	11.7	30	Φ6

SBR20-C 800L

Part name	Dimensions(mm)											
	h	E	W	L	F	h1	θ	B	C	S	L1	T
SBR20UU	23	24	48	50	39	10	60°	35	35	M6	12	11
Part name	Dimensions(mm)											
	Shaft Dimensions		E	h	B	H	T	F	X	Y	C	S1
SBR20	Φ20×800L		22.5	27	45	17.7	5	19	8	10	35	Φ6

SBR20-C 1000L

Part name	Dimensions(mm)											
	h	E	W	L	F	h1	θ	B	C	S	L1	T
SBR20UU	23	24	48	50	39	10	60°	35	35	M6	12	11
Part name	Dimensions(mm)											
	Shaft Dimensions		E	h	B	H	T	F	X	Y	C	S1
SBR20	Φ20×1000L		22.5	27	45	17.7	5	19	8	10	35	Φ6

SBR20-C 1200L

Part name	Dimensions(mm)											
	h	E	W	L	F	h1	θ	B	C	S	L1	T
SBR20UU	23	24	48	50	39	10	60°	35	35	M6	12	11
Part name	Dimensions(mm)											
	Shaft Dimensions		E	h	B	H	T	F	X	Y	C	S1
SBR20	Φ20×1200L		22.5	27	45	17.7	5	19	8	10	35	Φ6

SBR20-C 1500L

Part name	Dimensions(mm)											
	h	E	W	L	F	h1	θ	B	C	S	L1	T
SBR20UU	23	24	48	50	39	10	60°	35	35	M6	12	11
Part name	Dimensions(mm)											
	Shaft Dimensions		E	h	B	H	T	F	X	Y	C	S1
SBR20	Φ20×1500L		22.5	27	45	17.7	5	19	8	10	35	Φ6

SBR20-C 1800L

Part name	Dimensions(mm)											
	h	E	W	L	F	h1	θ	B	C	S	L1	T
SBR20UU	23	24	48	50	39	10	60°	35	35	M6	12	11
Part name	Dimensions(mm)											
	Shaft Dimensions		E	h	B	H	T	F	X	Y	C	S1
SBR20	Φ20×1800L		22.5	27	45	17.7	5	19	8	10	35	Φ6


SBR20-C 2200L

Part name	Dimensions(mm)											
	h	E	W	L	F	h1	θ	B	C	S	L1	T
SBR20UU	23	24	48	50	39	10	60°	35	35	M6	12	11
Part name	Dimensions(mm)											
	Shaft Dimensions		E	h	B	H	T	F	X	Y	C	S1
SBR20	Φ20×2200L		22.5	27	45	17.7	5	19	8	10	35	Φ6

SBR25-C 1200L

Part name	Dimensions(mm)											
	h	E	W	L	F	h1	θ	B	C	S	L1	T
SBR25UU	27	30	60	65	47	11.5	50°	40	40	M6	12	14
Part name	Dimensions(mm)											
	Shaft Dimensions		E	h	B	H	T	F	X	Y	C	S1
SBR25	Φ25×1200L		27.5	33	55	21	6	21.5	8	12	40	Φ6.5

LINEAR SLIDE RAIL


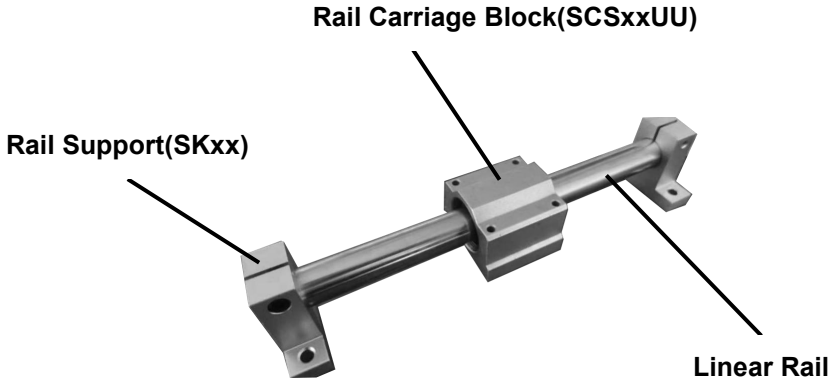


Linear Rail


- Material:GCR15 45"
- Hardness:HRC62+2(45*:HRC58)
- Surface hard-thickness:0.8~2.5mm
- Surface roughness:0.8S~1.6S
- Straightness:80μm/1000mm
- Roundness:≤3.0μm(Rmax)



Rail Carriage Block(SCSxxUU)

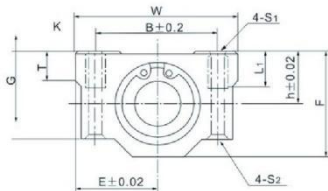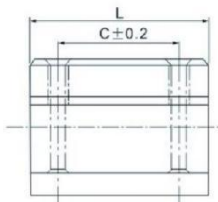

Rail Support(SKxx)

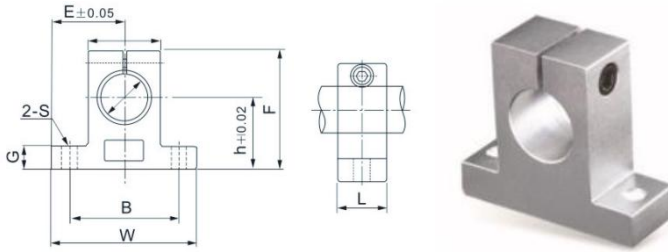

SFC16-1000L

Part name	Dimensions(mm)												
	T	h	E	W	L	F	G	B	C	K	S1	S2	L1
SCS16UU	9	19	25	50	44	38.5	32.5	36	3 4	7	M5	4.3	12
Part name	Dimensions(mm)												
	Shaf Dimensions		h	E	W	L	F	G	P	B	S		
SK16	Φ16×1000L		27	24	48	16	44	8	25	38	5.5		

SFC20-1000L

Part name	Dimensions(mm)												
	T	h	E	W	L	F	G	B	C	K	S1	S2	L1
SCS20UU	11	21	27	54	50	41	35	40	40	7	M6	5.2	12
Part name	Dimensions(mm)												
	Shaf Dimensions		h	E	W	L	F	G	P	B	S		
SK20	Φ20×1000L		31	30	60	20	51	10	30	45	6.6		

SFC20-1200L

Part name	Dimensions(mm)												
	T	h	E	W	L	F	G	B	C	K	S1	S2	L1
SCS20UU	11	21	27	54	50	41	35	40	40	7	M6	5.2	12
Part name	Dimensions(mm)												
	Shaf Dimensions		h	E	W	L	F	G	P	B	S		
SK20	Φ20×1200L		31	30	60	20	51	10	30	45	6.6		

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD
NSW 2122 Australia

Imported to USA: VEVOR STORE INC, 9448 RINCHMOND PL #E
RANCHO CUCAMONGA, California, 91730 United States of America



Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom



SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Made In China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support